

Medi@link Black Panther

Guide how to install and set extended software

Black Panther with extended software allows you :

- Sharing of the cards using CCCam and MGcamd as a client
- Sharing of the cards with own protocol CardClient between multiple Black Panther receivers in network
- Reading of Cryptoworks and Pisis cards

Procedure:


1. Installation of the extended software :


There are two ways how to install software.

Using USB or using internet connection.

Installation using USB :

- Copy file „update_pmhd.img“ to usb stick , connect usb stick to the receiver that is turned ON and wait until it is recognized. Go to menu Network , press red button „**SW update**“ , enter PIN (default PIN is „0000“)

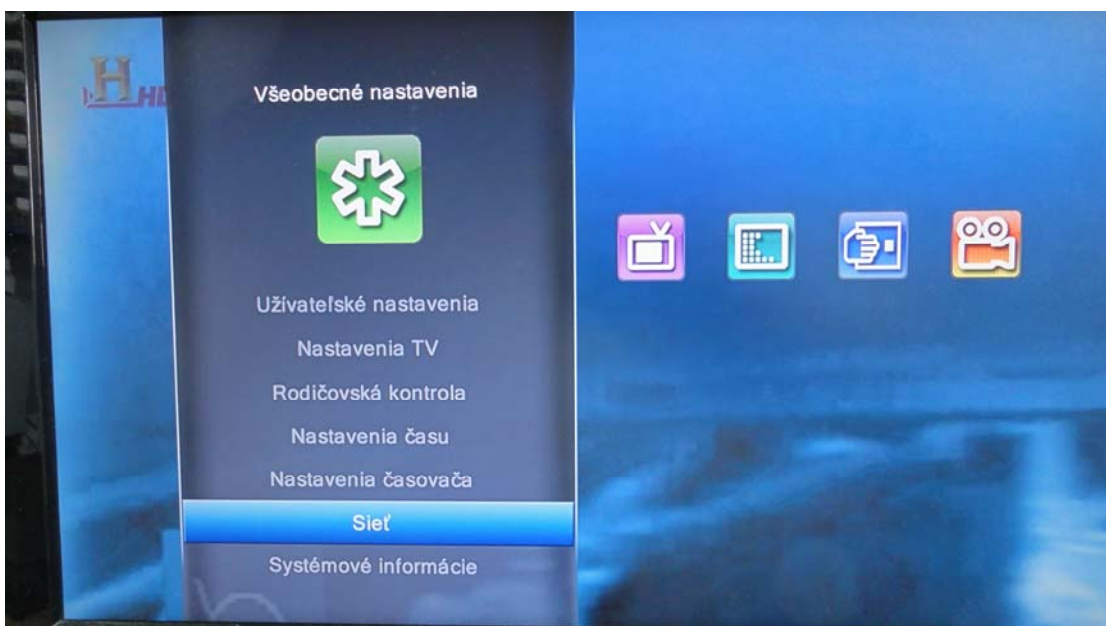


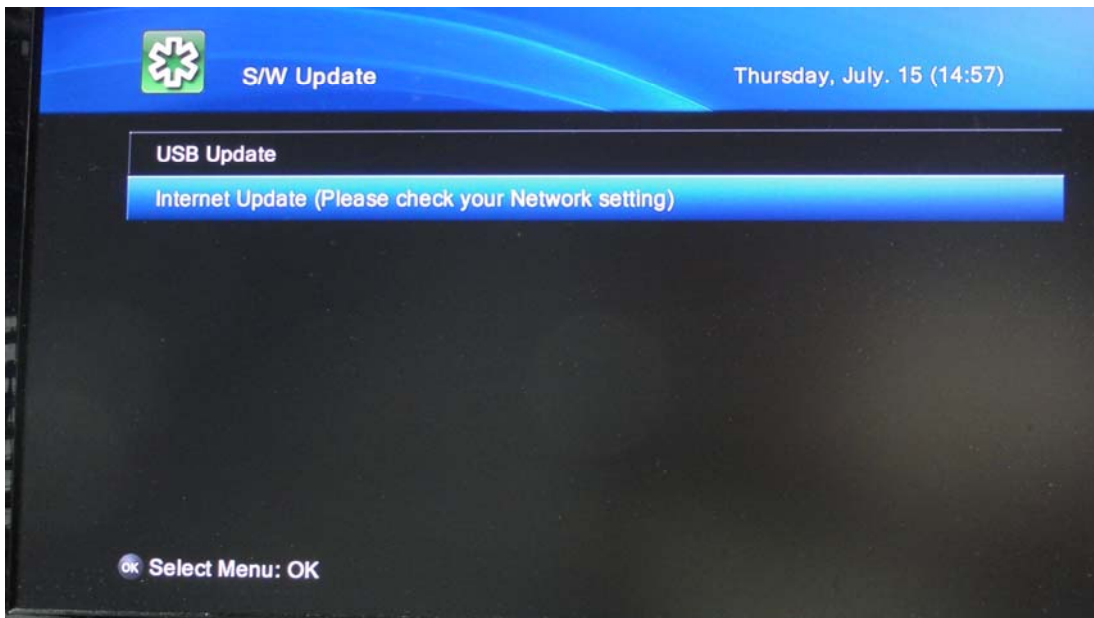


Menu S/W Update will pop up. Choose **USB Update** , in next menu confirm **YES**. Software update will start. DO NOT turn off your receiver, wait until it will restart itself.

Installation using internet connection :

- Go to Network menu , check if IP address assigned to the receiver is correct and corresponding with IP addresses used in your network.
- Press red button „**SW update**“ , enter PIN (default PIN is „**0000**“)

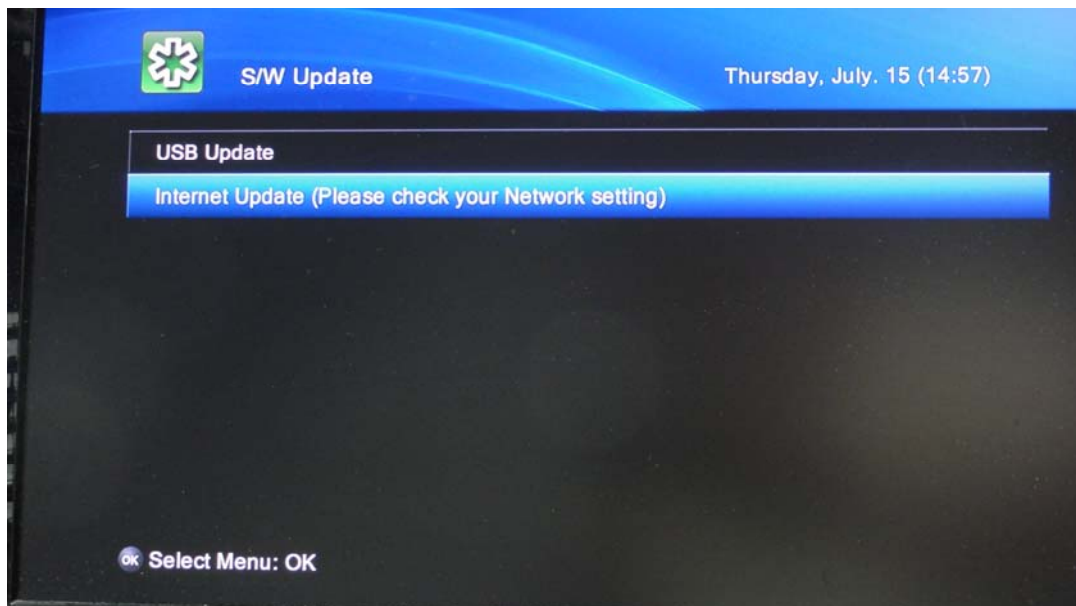

Choose **Internet Update**

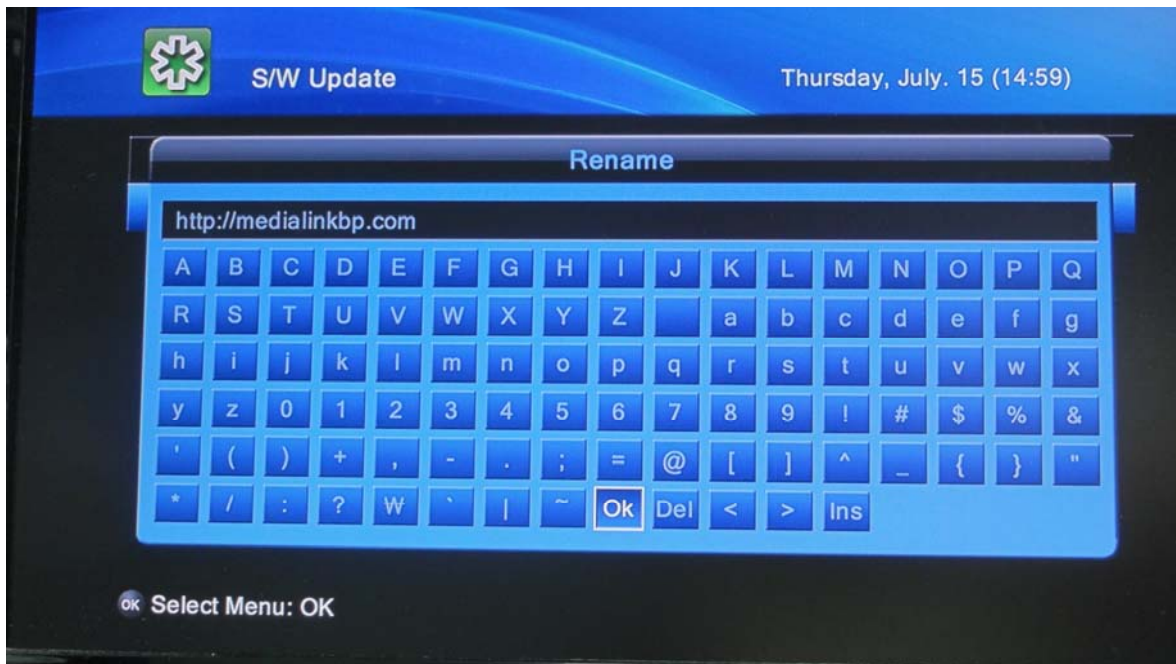

Use virtual keyboard that appears on the screen and add suffix „com“ .

It should look like <http://medialinkbp.com> and confirm **OK** on virtual keyboard.



Software update will start. Wait until receiver will restart itself.

Note: If there is a message **Download Software** on the screen and status bar will stop for longer time (more then 1-2 min) , disconnect receiver and try it again.

Setting :

Sharing can be set by two ways, using web interface or in menu of the receiver.


Setting using web interface :

Open your web browser, in address bar enter IP address of your receiver and port 8080 in form: **XX.XX.XX.XX:8080** , for example „**10.0.0.34:8080**“

You will be prompted to enter your access.


Enter **Login: admin**

Password: 1234 or 0000

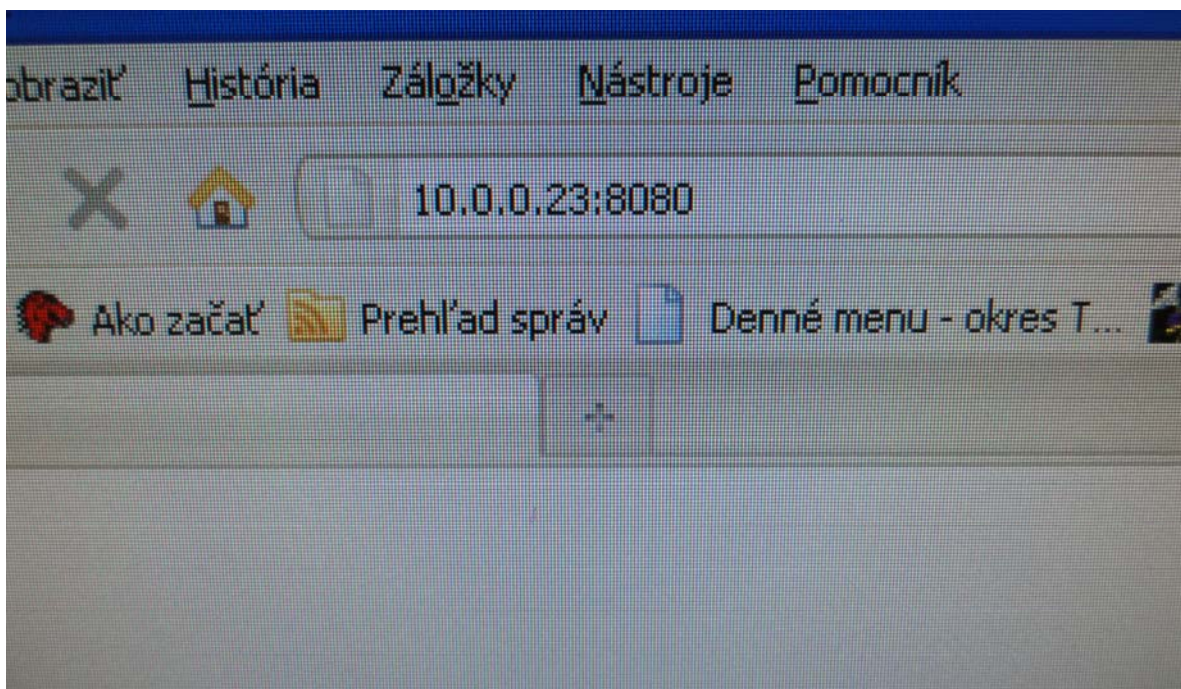


(Password can be changed in this web interface in tab **Settings**)

Simple web interface will appear on the screen

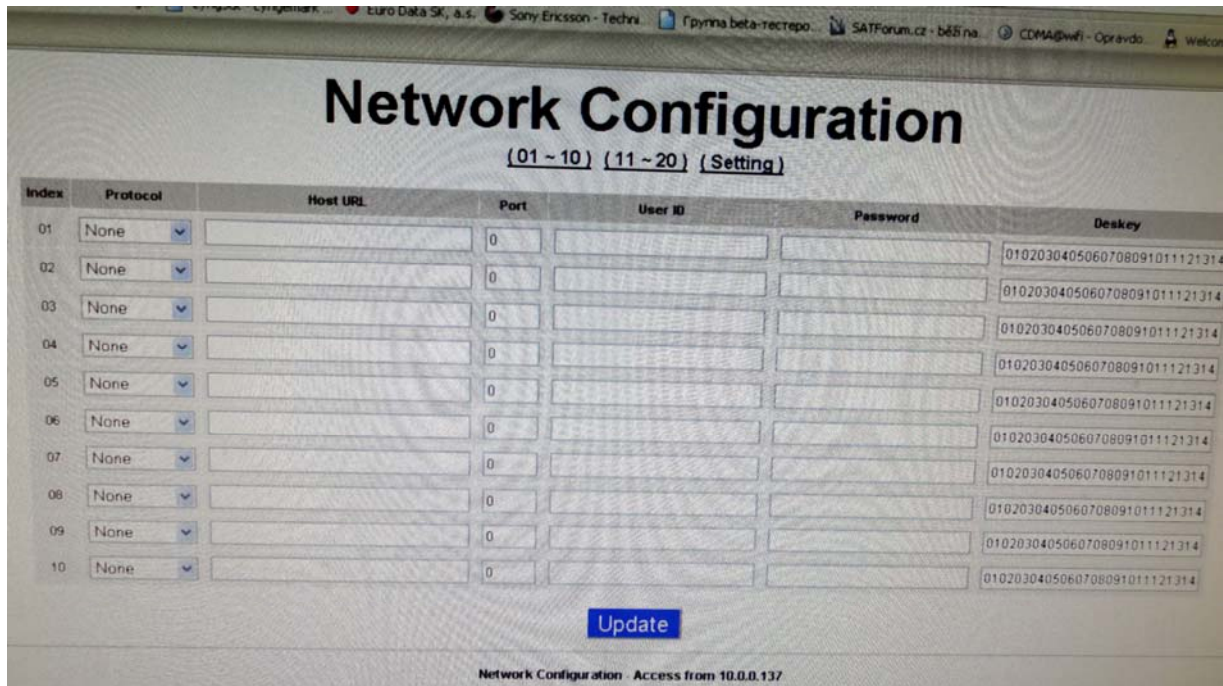

For using external servers choose appropriate protocol (Newcamd or CCCam) and enter parameters of the server.

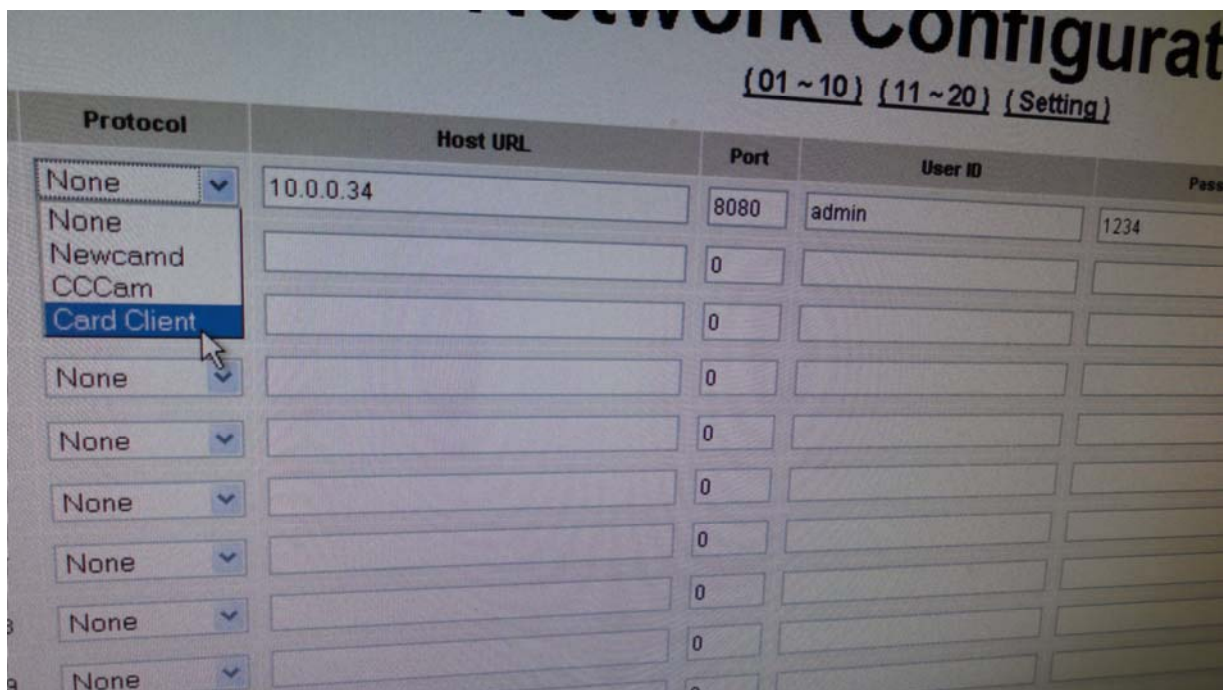


Network Configuration

(01 ~ 10) (11 ~ 20) (Setting)

Index	Protocol	Host URL	Port	User ID	Password	
01	Newcamd	87.130	10000			0102030
02	Newcamd	87.130	10001			0102030
03	None		0			0102030
04	None		0			0102030
05	None		0			0102030
06	None		0			0102030
07	None		0			0102030
08	None		0			0102030
09	None		0			0102030
10	None		0			0102030


[Update](#)

After all parameters have been entered, press blue button **UPDATE** , parameters will be saved and emulator will start.

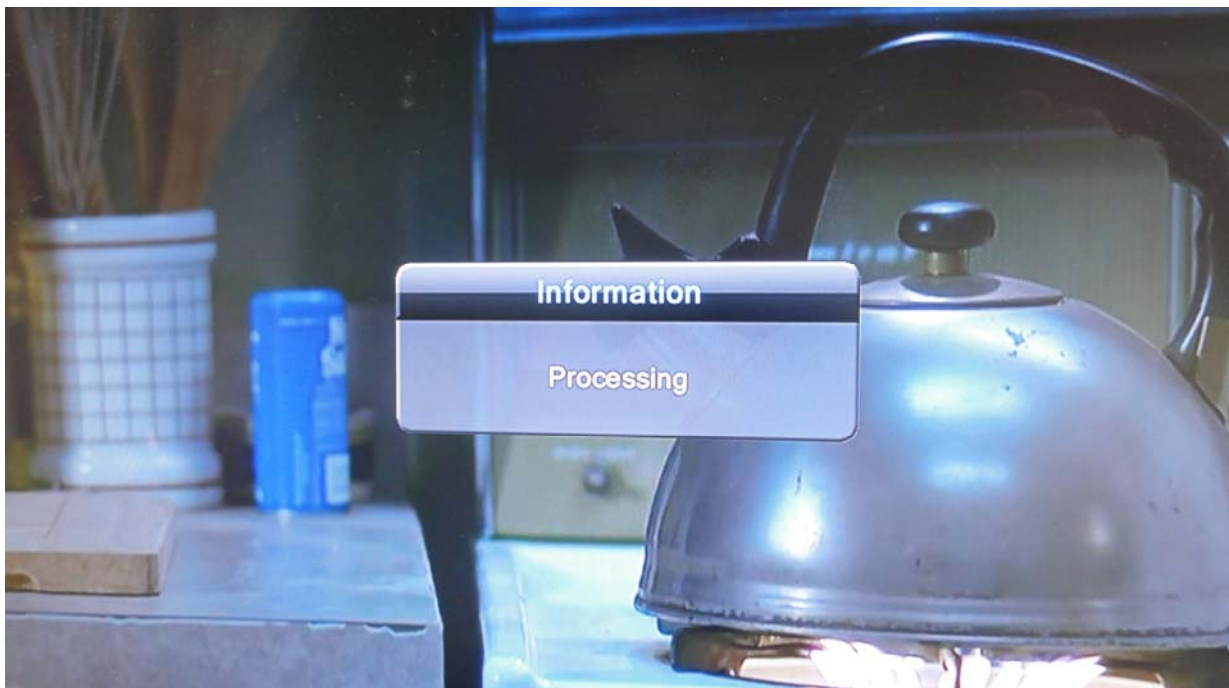


If you need to connect multiple Black Panther receivers , all of them must have extended software installed.

Insert the card in one of the receivers, this one will be **server** . Find it´s IP address in **Network** menu and remember it.

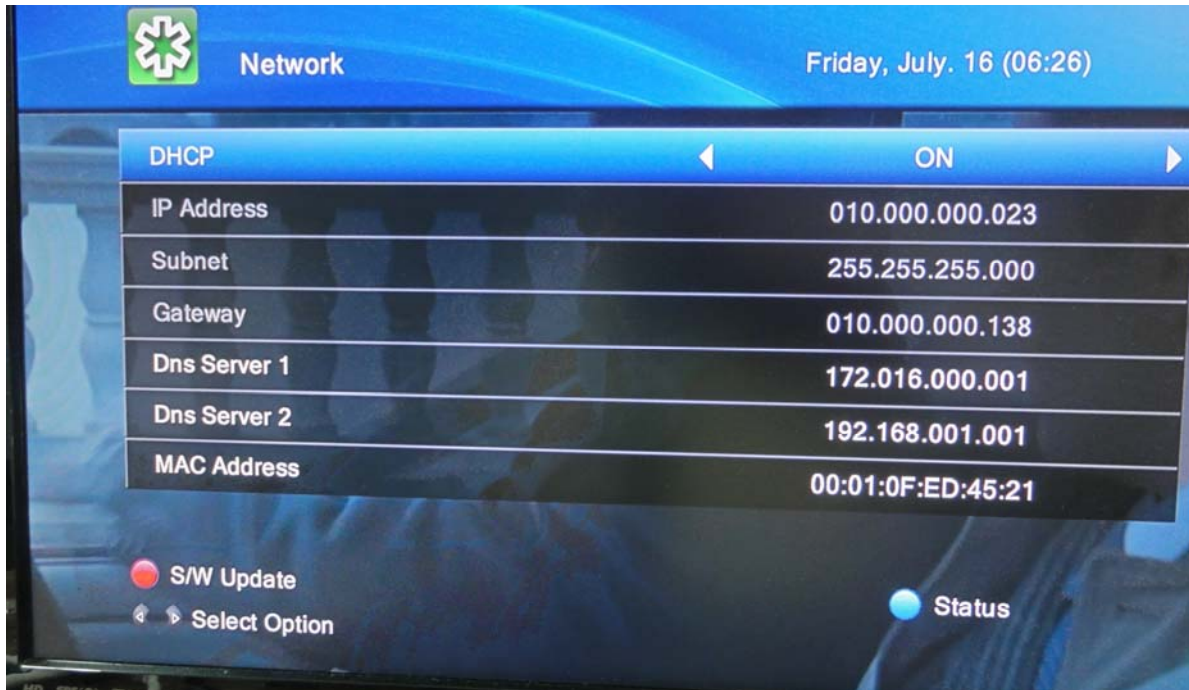


Using web interface connect to the receiver that will be the client (the share tab)

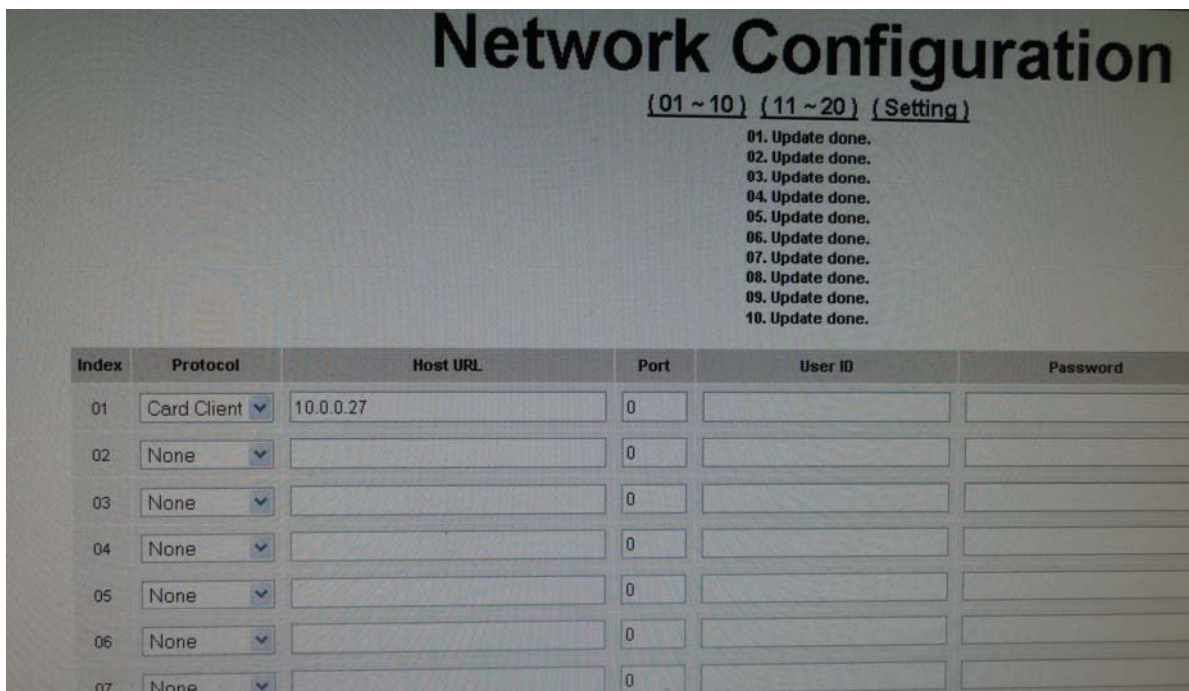

Choose CardClient protocol and enter IP address of the **server** , nothing else need to be set. After all parameters have been entered, press blue button **UPDATE** , parameters will be saved and emulator will start.

You can check all parameters and status of emulator when you press blue button **Status** in **Network** menu.

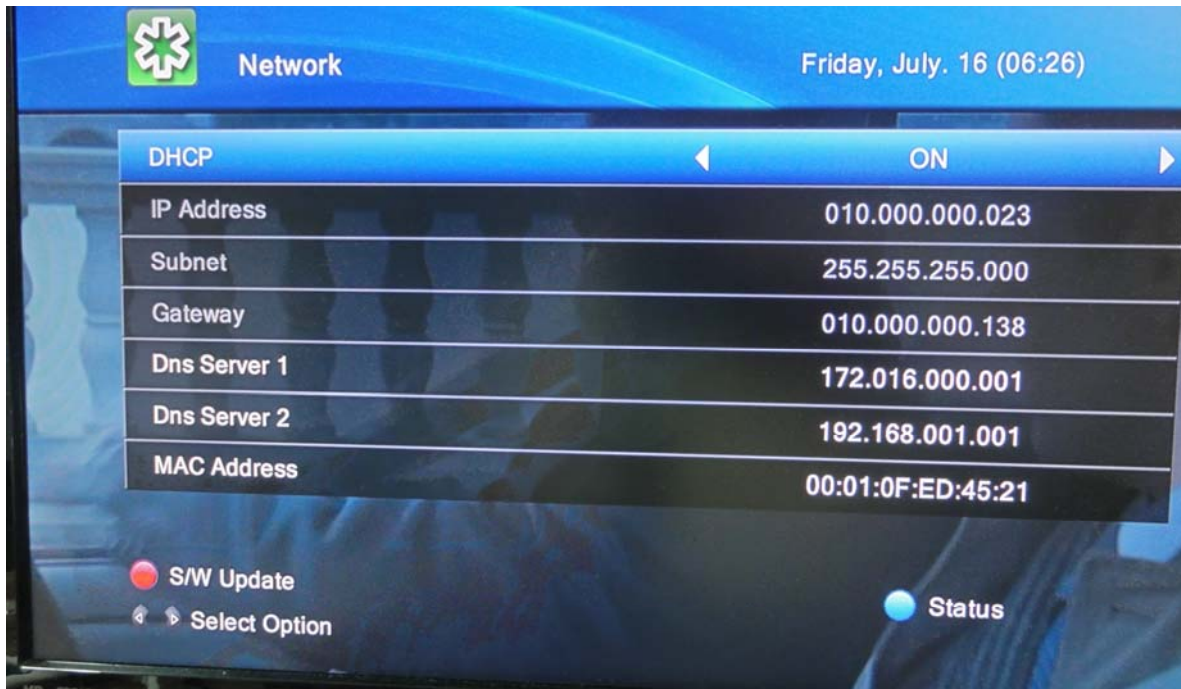



After PIN has been entered (default is **0000**) menu of emulator will appear.

In the line **Status** you can see actual status

Login OK – connected

Decode OK – connected, in use,

Login Failed – not connected

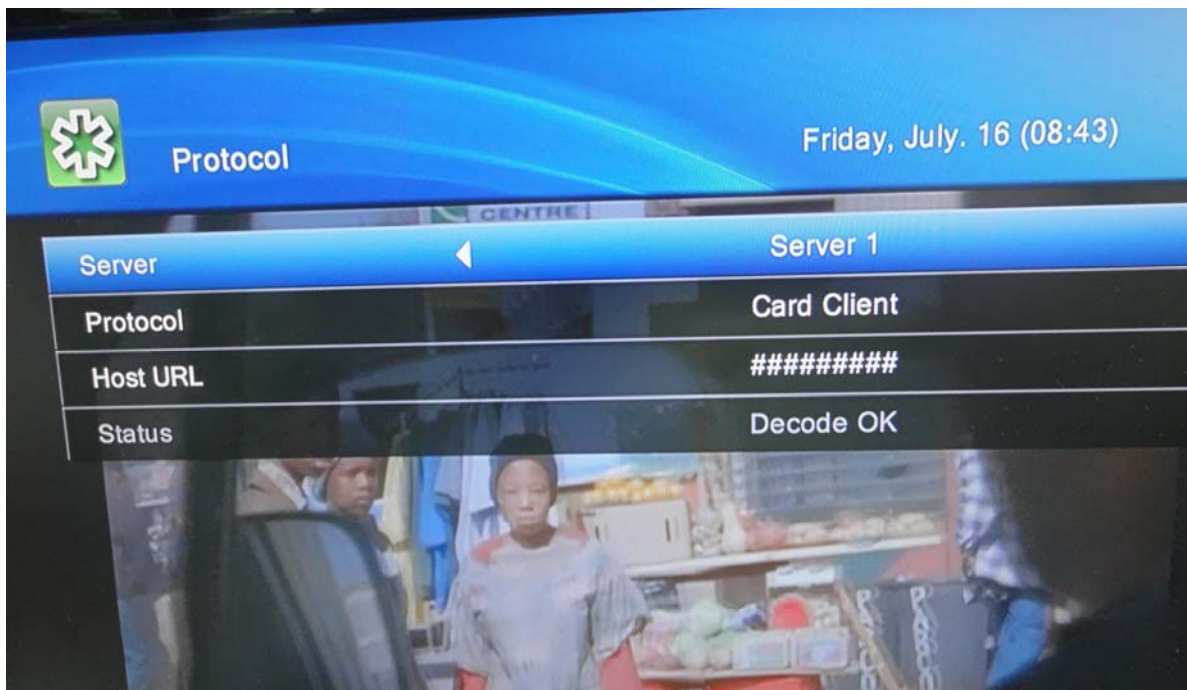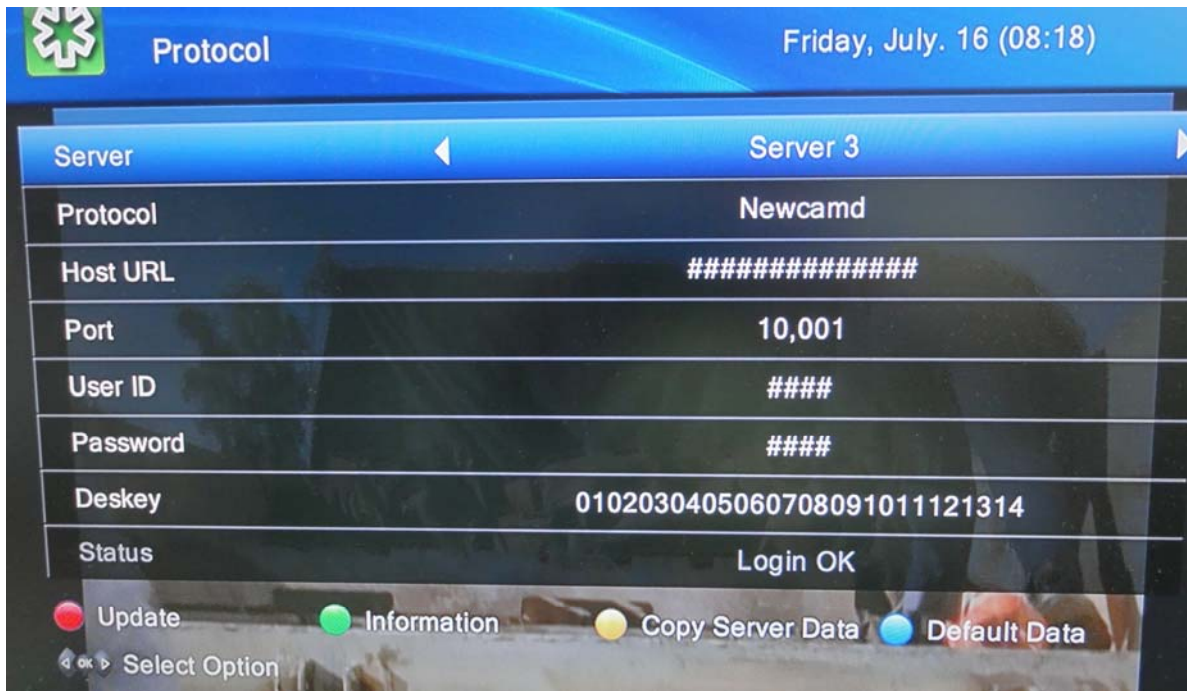

In this menu you can set parameters of the servers using remote control without use of the computer.